

Process Beer Finings Optimisation Procedure

To clear, labelled, glass, bottles add 250ml. of green (unfined) beer at a temperature of 0--1°C




Using a syringe, add isinglass at a range of rates



Invert to mix.
Leave to settle for 24 hrs.
at -1 C in a refrigerator



Measure the Haze using a haze meter (EBC units) and the sediment volume (% Sediment) with a rule.

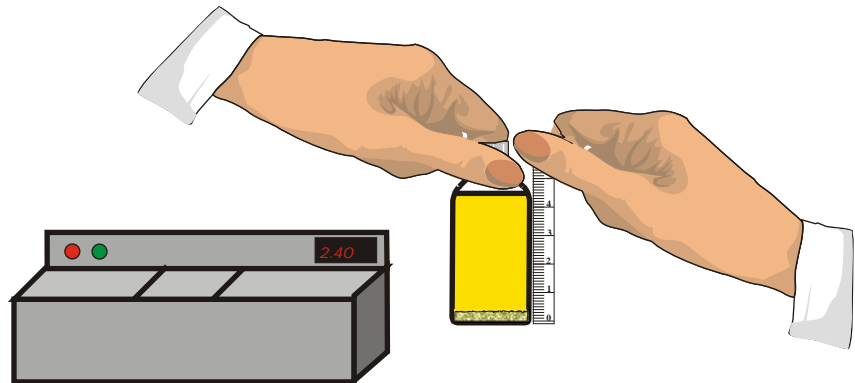

Record the results.
Repace and observe after a further 24hrs, and after a further 48 hrs.

